




Billet D-Rings - Installation Guide

Application: Toyota Tacoma

1. Remove factory D-Ring bolts using a T40 Torx bit.
2. Apply a light coating of grease under the bolt head and insert the factory bolt through D-Ring.
3. Reinstall factory washers and provided plastic retaining washer, then apply blue Loctite to the threads of the factory bolt.
4. Thread assembly back into bed and securely tighten.

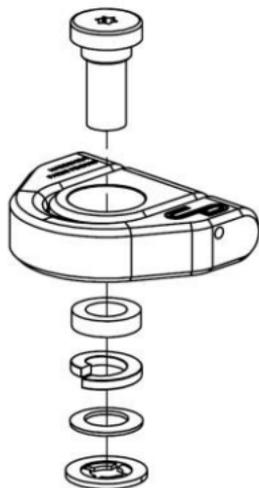

- Never exceed your vehicle's load capacity.
- Use multiple straps to spread load and provide redundancy.
- Check bolt tightness before using Billet D-Rings.